




what will you need?

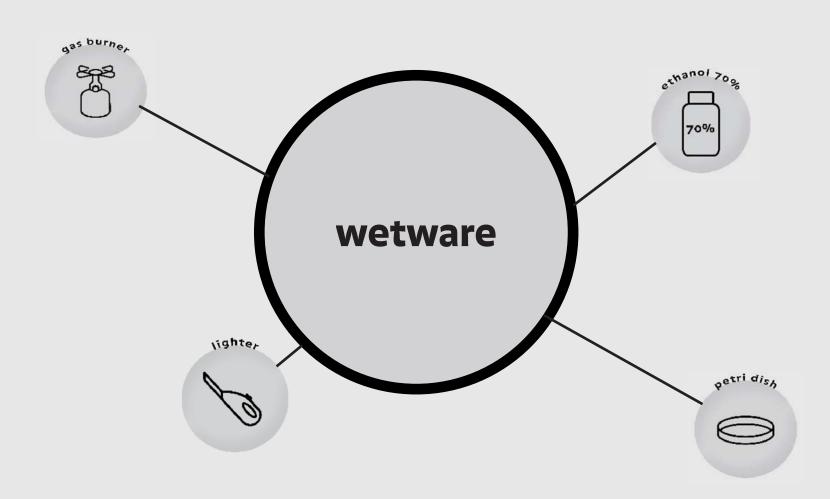



what to do?

1.



Gather your tools

2.



Sterilize your working space by applying alcoohol and firing the gas burner



3.



Prepare the ingredients needed for your cultivation medium

4.



Use a 1L bottle to autoclave your cultivation medium



5.



Use the scale to measure your ingredients. Be careful to calculate 1/4 of your ingredients, as you can prepare only 1/4 of your solution in the 1L bottles

6.



Pour in the bottle your ingredients with 250 mL water and pour 1L of water on the pressure cooker. Remember to keep the cap of the bottle unscrewed



7-



In the meantime prepare your petri dishes and write down the name of the medium you are preparing 8.



Once the cultivation medium is ready and cooled down, fire the gas burner and quickly pass the edge of your bottle a few times through the flame



9.



Open the petri dish as little as possible and pour the cultivation medium inside. Shake gently to cover the petri dish surface and let it solidify 10.



Store the petri dishes in the refrigirator until you are ready to grow your pets